




DEL AOP PRO (200, 350, 500) INSTALLATION INSTRUCTIONS & PRODUCT MANUAL

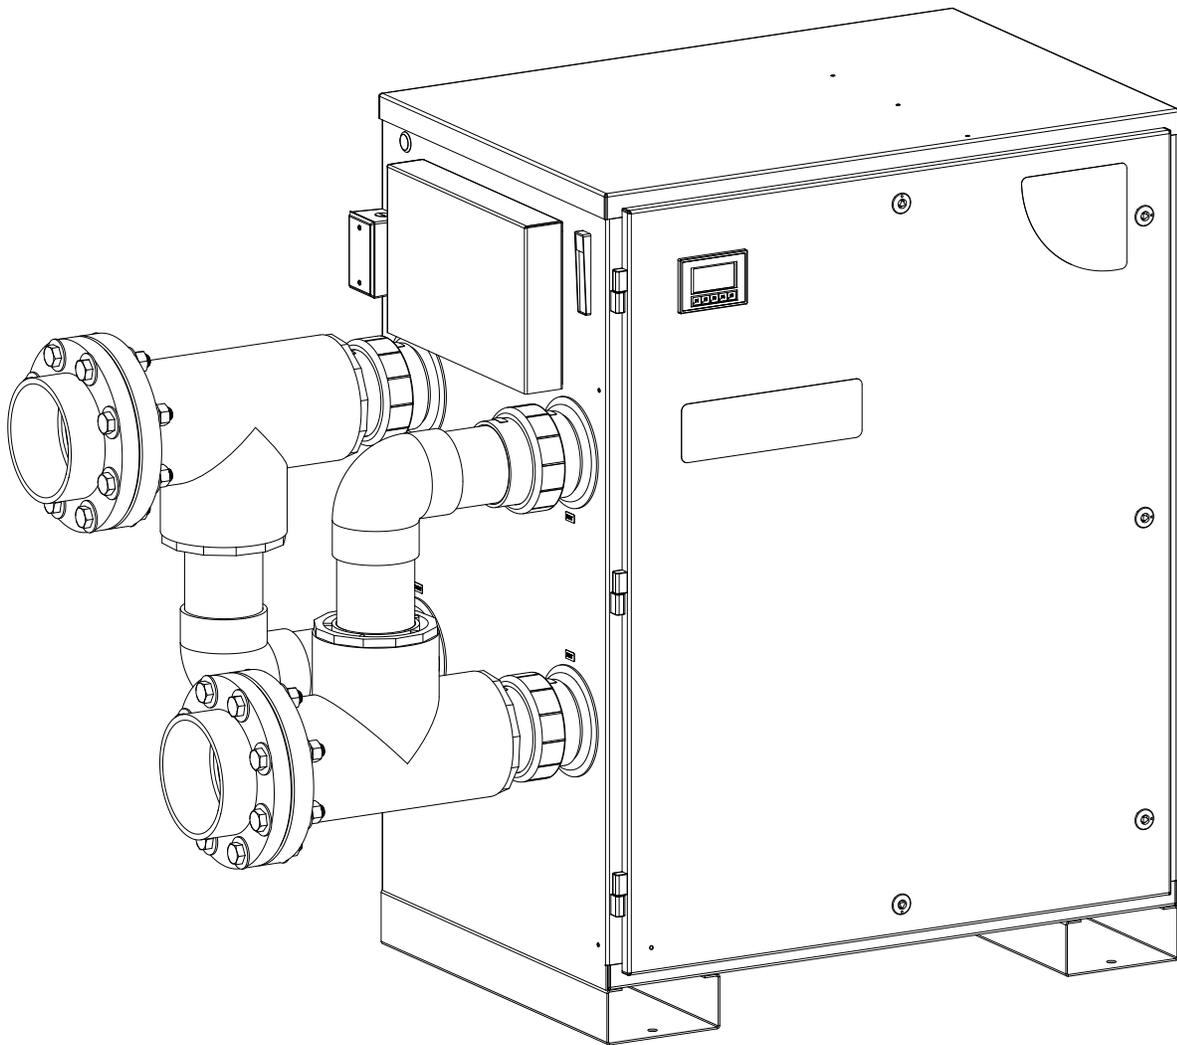

DEL  **AOP PRO**

CMPCOMMERCIAL.COM

4-2717-01 Rev.A

IMPORTANT INFORMATION

READ AND FOLLOW ALL INSTRUCTIONS

- Read this manual completely before attempting installation. Failure to install in accordance with the installation instructions could void warranty and result in injury or death.
- All permanent electrical connections should be made by a qualified electrician.
- A pressure wire connector, labeled bonding lugs, is provided on the outside of the unit to permit connection to a minimum No. 6 AWG (13.3 mm²) solid bonding conductor between this point and any metal equipment, metal enclosures of electrical equipment, metal water pipes, or conduit within 5 feet (1.5 meters) of the unit as needed to comply with local requirements.
- Install at least 5 feet (1.5 meters) from wall of pool.
- Follow all applicable electrical codes.
- **⚠ DANGER** **ELECTRIC SHOCK HAZARD:** Be sure to turn power OFF and disconnect from power source before any service work is performed. Failure to do so could result in serious injury or death.
- The AOP Pro must be installed in an outdoor location, or indoors in a forced air ventilated room, and installed so that the orientation is exactly as shown in *Figure 4*. Install to provide water drainage of generator to protect electrical components.
- Mount the AOP Pro so that it is inaccessible to anyone in the pool. Never attempt any servicing while unit is wet.
- **⚠ WARNING** Short-term inhalation of high concentrations of ozone and long term inhalation of low concentrations of ozone can cause serious harmful physiological effects. DO NOT inhale ozone gas produced by this device.
- For your safety, do not store or use gasoline, chemicals or other flammable liquids or vapors near this or any other appliance.
- To maintain cosmetic integrity, protect this unit from direct prolonged sunlight exposure.
- To reduce the risk of injury, do not permit children to use this product, unless they are closely supervised at all times.
- **ENVIRONMENTAL NOTICE:** Hg-Lamp CONTAINS MERCURY. Manage in accordance with disposal laws.
See: www.lamprecycle.org
- If unit is not operated according to instructions, high dosages of harmful substances may potentially be released.
- Product has met the requirement of NSF/ANSI 50, Annex H.1 for supplemental disinfection and is designed for pools that are in compliance with the U.S. Model Aquatic Health Code (MAHC). Installed flow rates must not exceed max listed flow rates to maintain NSF product listing as well as ensuring proper microbial performance.
- NSF/ANSI 50, Section 13 disinfection efficacy testing for 3 log (99.9%) or greater of *Pseudomonas Aeruginosa* and *Enterococcus Faecium*. Specific residual levels of EPA registered disinfection chemicals may be required by the regulatory agency having authority. Product is designed for supplemental disinfection and should be used with registered or approved disinfection chemicals to impart residual concentrations.

SAVE THESE INSTRUCTIONS!

TABLE OF CONTENTS

1 General Information

1A. Description	1
1B. Specifications	1

2 Installation

2A. Pool Preparation	2
2B. Location	3
2C. Mounting	3
2D. Electrical	3
2E. Plumbing	4

3 Operation

3A. Initial System Start-Up	5
3B. Normal Operation	5
3C. System Shut-Down	7
3D. Water Chemistry	7

4 Maintenance & Service

4A. System Electromechanical Overview	9
4B. Ozone System Maintenance	9
4C. UV Reactor Service and Maintenance	10
4D. PLC Memory Battery Backup Replacement	13
4E. Winterizing	13

5 Troubleshooting & Resources

5A. Troubleshooting	14
5B. Contact Information	15
5C. Ordering Information	15
5D. Standard Replacement Parts List	15

Appendix A: Pressure Drop Curve	16
Appendix B: In-Place Quartz Tube Cleaning	17

1. GENERAL INFORMATION

1A. Description

DEL AOP Pro advanced oxidation process (AOP) products provide enhanced oxidation/disinfection capability by combining ozone and UV-C to form hydroxyl radicals. The optimized ozone/UV-C ratio results in hydroxyl radical creation that far exceeds any competitive AOP system. This is a game changer in disinfection, oxidation of organic and non-organic contaminants, destruction of biofilm and optimizing water clarity.

AOP is compatible with all traditional sanitizers. These systems are cost effective to operate and maintain. AOP Pro products are NSF certified for supplemental disinfection of pools and spas.

	AOP-PRO-200D	AOP-PRO-350D	AOP-PRO-500D
FLOW	65-200 GPM	125-350 GPM	125-500 GPM
INLET/OUTLET	3 in	4 in	6 in
UV LAMP QTY	8	16	20
PLC CONTROL	Yes	Yes	Yes
VOLTAGE (1Ø)	240 VAC	240 VAC	240 VAC
CURRENT	5.5 A	7.8 A	8.8 A
GAS FLOW RATE	3.2 CFH	8.0 CFH	8.0 CFH

Table 1: AOP Pro Sizing Chart

1B. Specifications

See *Table 1* for list of models and specs that apply to this manual. Images shown are model AOP-PRO-500D but manual instructions apply to all models, unless otherwise noted.

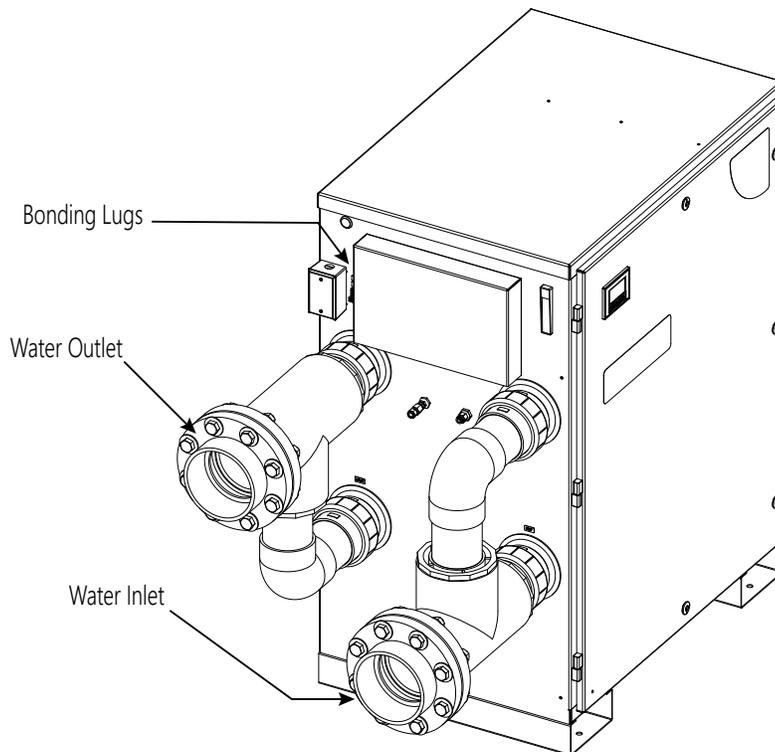


Figure 1: AOP Generator Overview

2. INSTALLATION

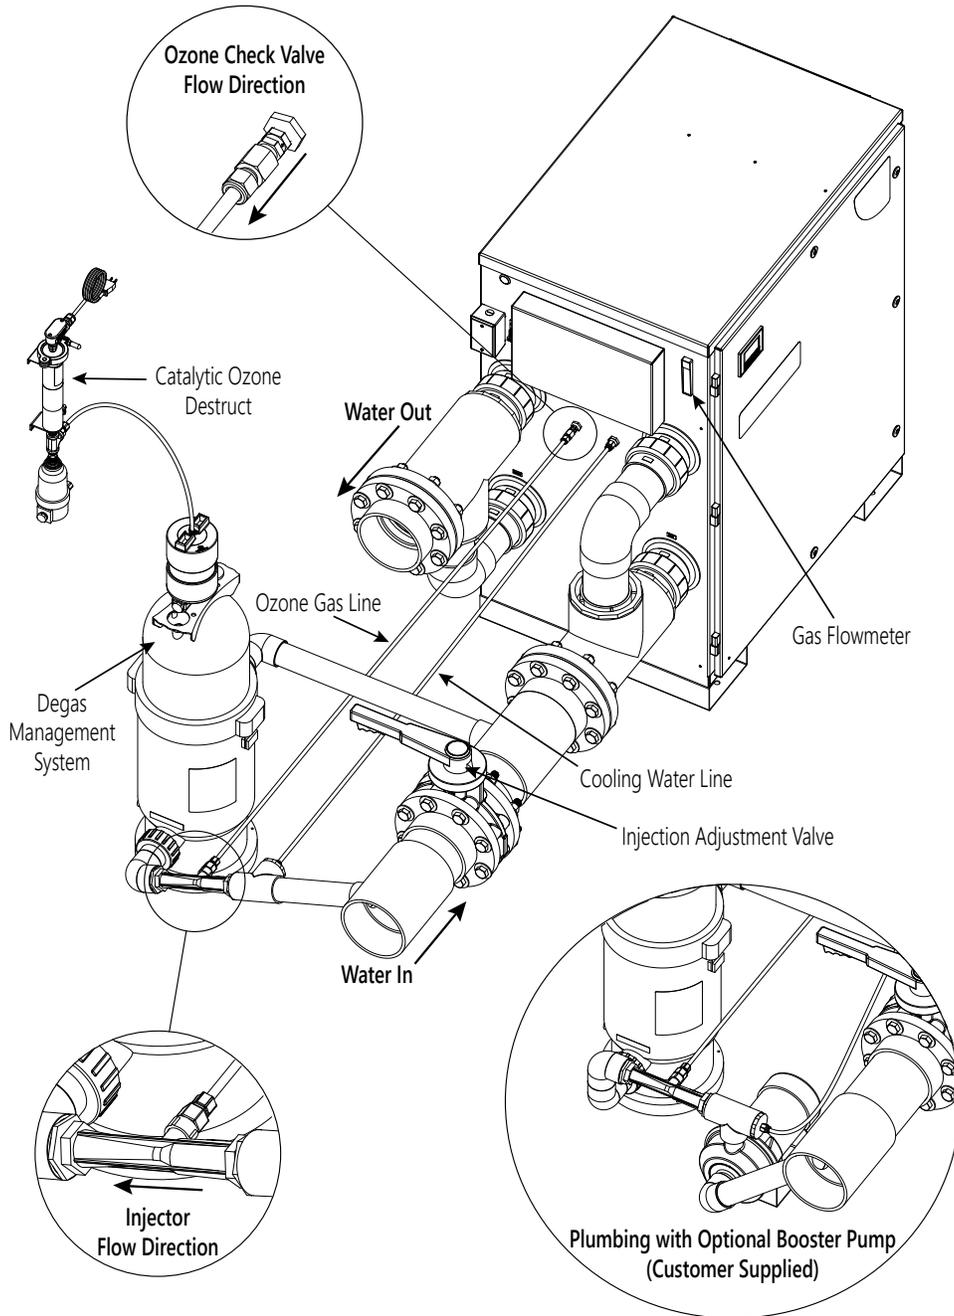


Figure 2: AOP Pro System Overview

2A. Pool Preparation

To achieve optimal performance from the system, the pool must be as clean as possible to start with.

1. Backwash or clean filters one day before starting the generator.
2. Superchlorinate pool water using a chlorine based shock treatment so the water has a sustained 1-3 ppm free chlorine level.
3. Test pool chemistry and adjust pH between 7.4 and 7.6. Adjust total alkalinity between 80 and 120 ppm.
4. Run pool filtration continuously for 24 hours prior to starting AOP Pro system.

2. INSTALLATION

2B. Location

- Ambient Temp.: 40°F - 100°F (5°C - 38°C)
- Locate the unit indoors or outdoors in a clean area protected from rain and direct sunlight.
- Locate the unit out of reach of sprinklers or drainage spouts. Allow sufficient access for maintenance (2 ft clearance above and 1 ft around the unit) and all plumbing and electrical hookups. Allow additional clearance in front of the unit to allow for door swing and lamp service.

2C. Mounting

- AOP-PRO-200 models are shipped with hardware for either floor or wall mounting. Attach the mounting rails in the desired position (bottom or back of the enclosure) and secure with the screws provided.
- AOP-PRO-350 and 500 models are floor mount only and have mounting holes integrated into the base supports.
- Mount the AOP Pro securely using appropriate hardware or anchors for the surface and as needed to meet local building code requirements.

2D. Electrical

Refer to the **IMPORTANT SAFETY INSTRUCTIONS** at the beginning of this manual for important wiring information.

2D-1. Main Power

- Connect the AOP Pro so that it operates simultaneously with the pool pump.
- An electrical junction box and wires are provided on the left wall of the enclosure for a 1/2" conduit connection.
- Remove the protective plug and install electrical fittings as required to meet local codes.
- Run service wires to the box and connect to provided wiring.
- Main power will also need to be supplied to the catalytic ozone destruct as stated on the destruct specification label.

2D-2. Bonding Lug

Connect a solid copper conductor to the bonding lug on the left side of the AOP Pro to an appropriate earth contact. (Figure 1)

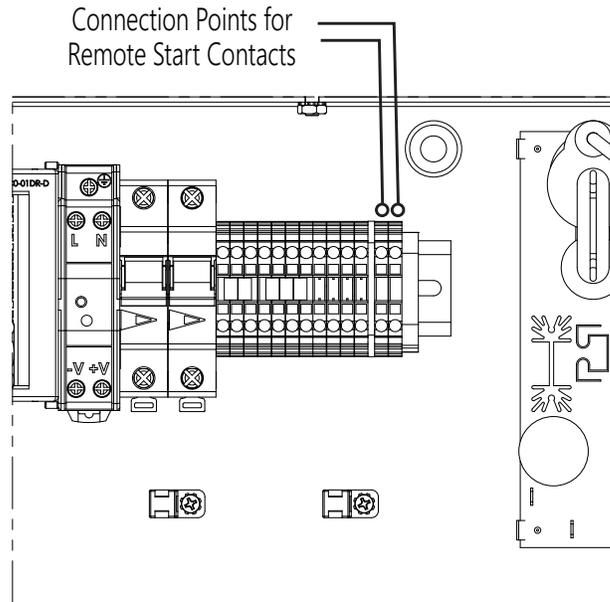


Figure 3: Remote Contact Locations

2D-3. System Control

- Remote start contacts have been provided for remote ON-OFF operation of the AOP Pro.
- These should be wired to an external device that closes when the pool pump is ON and opens when it is OFF.
- Failure to use the remote start contacts may result in damage to the unit not covered under warranty.

2. INSTALLATION

2E. Plumbing

The AOP Pro is added into the pool's plumbing loop. The AOP Pro consists of the main enclosed assembly (AOP generator) and injector and degas management system from the parts kit. These parts are to be installed into the pool's return line, as shown in Figure 2.

IMPORTANT! Plumbing inlet and outlet layout may vary from AOP-PRO-500D model shown in Figure 1. Always plumb flow according to the marking on the unit.

2E-1. Plumbing the AOP Pro (Refer to details in Figures 1 & 2.)

- Install in the main return line of the pool after all other equipment (filter and heater).
- Install cleaners such as chlorinators after the AOP Pro.
- The outlet of the AOP Pro must be at least 10 feet from the first return of the pool.
- Use the fittings provided in the parts kit to connect the AOP Pro inlet and outlet to the plumbing.
- The included injector and degas management system components should be installed immediately upstream of the inlet of the AOP generator.
- Provided cooling water and ozone gas line tubing must be connected between the injector system to the AOP generator.
- The ozone check valve must be installed to the AOP generator and ozone gas line tubing with the flow direction pointing toward the injector.

2E-2. Check Valve

- If the pool equipment is mounted above the water line, a check valve must be installed between the pump outlet and the injector to prevent the pump from draining and losing its prime (when not in use).

3. OPERATION

3A. Initial System Start-Up

Upon completing all system connections and cleaning the pool as outlined in **SECTION 2**, you are ready to start the AOP Pro.

1. Ensure that power is removed from the AOP Pro and turn on the pool circulation system.
2. Confirm that all fittings are free of leaks both outside and inside the unit. Contact Technical Support if any leak is discovered inside the AOP Pro.
3. Close the enclosure door.
4. Apply power to the AOP Pro.
5. Adjust the injection adjustment valve to achieve specified gas flow rate as indicated on the feed gas flowmeter.
6. The system should now run normally.

3B. Normal Operation

3B-1. HMI Screen

The HMI (Human-Machine Interface) screen includes status indicators and text to communicate real-time system conditions as well as access to historical data. The five function buttons allow user navigation of the menus and user input. The HMI display color will also change to alert the user of certain conditions as noted below.




Example with Normal Operation




Example with Fault Message (Flashing Amber Backlight)

1. Main Screen: Contains most of the information that is important to view during normal operation, including: text fields for unit operational status, alerts, and service reminders. The unit will automatically return to the main screen after five minutes of inactivity on any other screen.

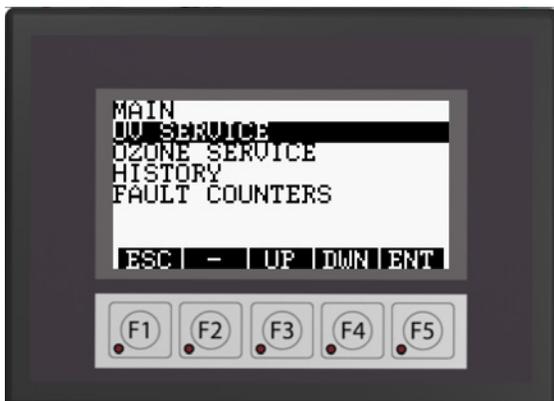

Screen Select Menu

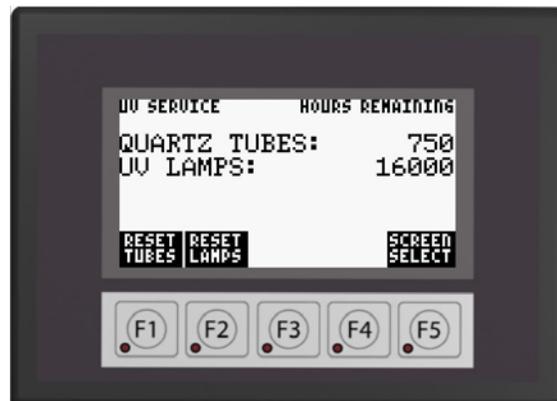

UV Service Screen

2. Screen Select Menu: This menu is accessed through the function button on any screen and allows navigating to the other HMI screens.


3. OPERATION

3. UV Service Screen: Contains countdown timers that track the hours remaining until service is due on listed UV components. Once service is complete, the user will use the specific function button to reset the corresponding service countdown timer. The hours remaining on the countdown timers are used to determine service messaging and alert reminders:
- More than 10% remaining = no banner message
 - 10% remaining = "SERVICE SOON" banner message
 - 5% remaining = "SERVICE REQUIRED" banner message
 - 0% remaining = "SERVICE PAST DUE" alert banner message with yellow screen background



Ozone Service Screen

4. Ozone Service Screen: Contains countdown timers that track the hours remaining until service is due on listed ozone components (model dependent). The same method as described in Section 3B-(1-3) is used to determine and reset service messaging and alert reminders for listed ozone components.

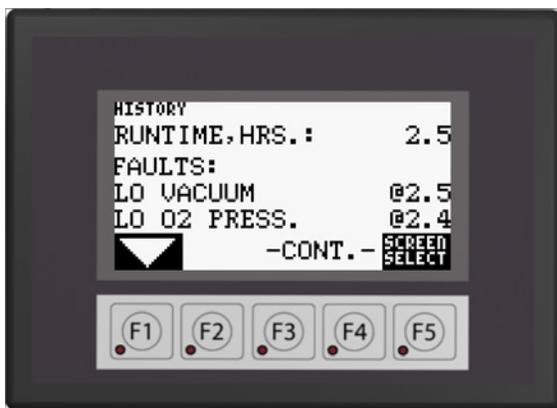

History Screen



Fault Counters Screen

5. History Screen: Contains the runtime hour meter of the unit and the fault history table.
- The runtime hour meter indicates the actual on time of the UV system, to the closest 1/10 hour.
 - The fault history table will indicate the fault and the accompanying time stamp, which is relative to the runtime hour meter.
 - Up to ten faults are listed with the most recent at the top of the table.
 - The function buttons allow navigation through the fault history table screens.
6. Fault Counters Screen: Contains a list of possible faults for the system (model dependent) and how many faults have occurred. The fault count can be used during troubleshooting to identify common faults in the system. All fault counts can be reset through the function key.

3. OPERATION



Banner Message

7. Banner Message: Located on the top of all screens, this field will provide messages and alerts relative to the real-time operation of the unit.

3C. System Shut-Down

Followed for servicing or storage.

1. Shut off water flow to the unit and/or close isolation valves if available.
2. Shut off power at the breaker.
3. Open enclosure door to access internal components.

NOTE: Water pressure may still be present depending on system plumbing. Ensure water pressure is relieved prior to servicing any water plumbing components.

3D. Water Chemistry

The AOP Pro will provide the benefits of oxidation, UV germicidal disinfection treatment and advanced oxidation with minimal impact to other water chemistry parameters. However, chlorine or other sanitizer residual levels must be maintained as required to meet local codes. Regular residual testing must be performed as usual.

4. MAINTENANCE & SERVICE

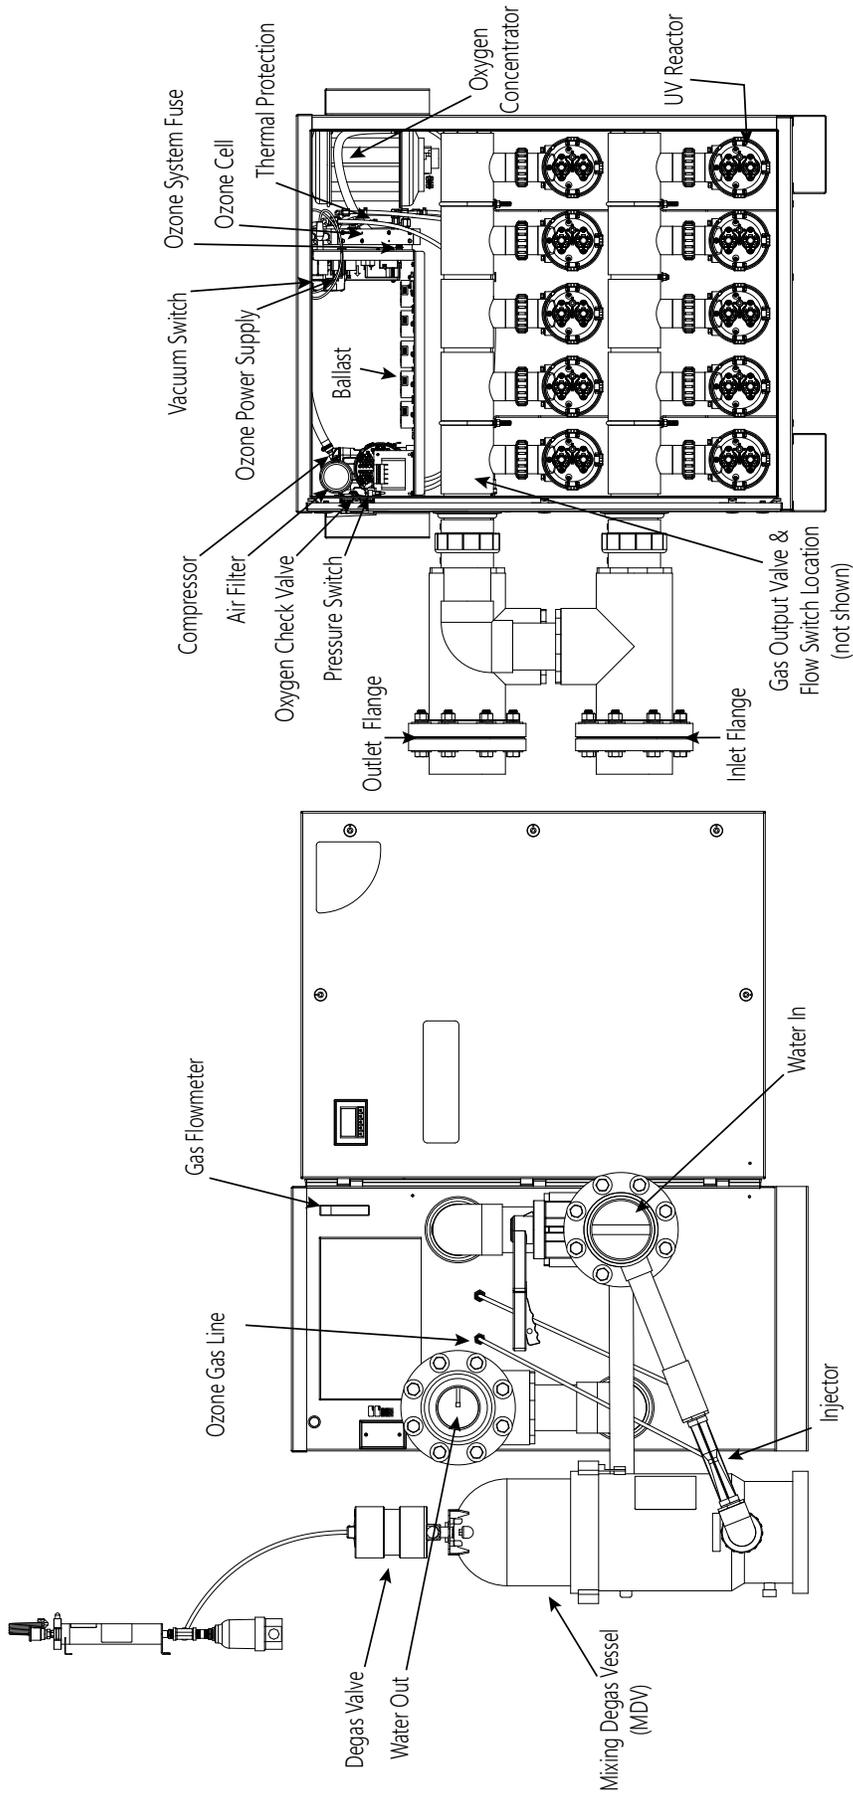


Figure 4: AOP Pro Electro-Mechanical Overview

4. MAINTENANCE & SERVICE

4A. System Electromechanical Overview

⚠ CAUTION Disconnect power before performing service. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** displayed in the front of this manual. Refer to **Figures 4, 5, and 6**.

4A-1. Ozone Generation System

The AOP Pro is constructed with one or two ozone cells, each powered by its own high voltage, high frequency power supply. The ozone cells are mounted on a water cooled heatsink block that is thermally protected.

4A-2. Gas Lines

Air enters through the air filter, is compressed and sent to the oxygen concentrator, where it is dried and nitrogen is removed. Oxygen exits the concentrator and passes through the gas flowmeter and oxygen check valve before entering the ozone cell(s). Ozone is generated in the cell(s), continues out through the gas output valve, exits the enclosure and ozone check valve to arrive at the injector in the process water line.

4A-3. Injector Plumbing

Refer to Figures 1 and 2. Water flowing through the injector generates a vacuum that draws ozone into the water. The amount of vacuum is based on the velocity of the water which can be adjusted using the injection adjustment valve (and optional, customer supplied, booster pump). The resulting gas flow rate can be observed on the gas flowmeter.

4A-4. Degas Management System

Water and gas exit the injector and enter the degas management system, which separates undissolved gas from the water. Undissolved ozone is vented through the degas valve and returned to oxygen by use of the catalytic ozone destruct. Ozone enriched water then exits the mixing degas vessel (MDV) and enters the input of the AOP Pro.

4A-5. UV Reactor

There are two lamps in each UV reactor of the AOP Pro powered by an energy efficient electronic ballast. Ozone enriched water enters the UV reactor and is exposed to UV-C causing AOP reactions to take place. The water exits the UV reactor to return to the process plumbing.

4B. Ozone System Maintenance

4B-1. Air Filter

The air filter must be inspected and cleaned monthly, at a minimum. Replace quarterly. Twist the air filter cap and lift off to expose filter element.

4B-2. Check Valves

The oxygen and ozone check valves must be replaced a minimum of once per year. Order valve replacements and swap into position, noting flow direction as shown on the valve body.

⚠ WARNING Trace amounts of nitric acid may be present in check valves, ozone cells, O-rings and gas lines. Wear proper safety equipment (skin and eye protection) and avoid direct contact with any condensation in used parts.

4B-3. Ozone Cells and O-rings

Replace ozone cell O-rings and inspect ozone cells a minimum of once per year. Each ozone cell uses two O-rings. Order replacement parts and swap into position as shown in Figure 5.

4B-4. Compressor

The compressor must be serviced a minimum of once per year. Order compressor rebuilt kit and perform service according to manufacturer's instructions.

4B-5. Gas Lines

Inspect the gas lines and replace as needed. If there is evidence of water leaking past the ozone check valve toward the ozone cells, shut down the AOP Pro immediately and drain and dry the gas lines. As necessary, replace the ozone check valve and/or gas output valve to prevent future issues. If water entered the ozone cells they will need to be replaced.

4. MAINTENANCE & SERVICE

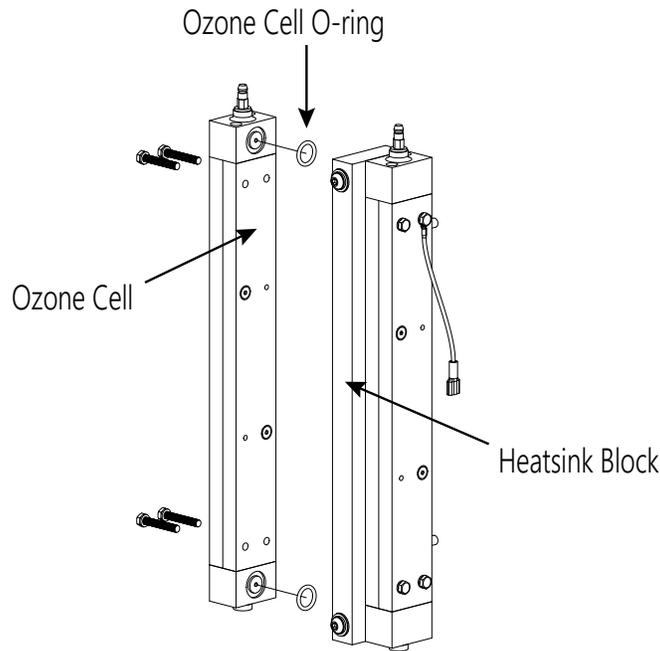


Figure 5: Ozone Cell and O-ring Service

CAUTION: Always disconnect power to the AOP Pro prior to performing service.

4C. UV Reactor Service and Maintenance

- Each UV Reactor contains two UV lamps and two quartz tubes.
- The UV lamps are designed to provide proper germicidal efficacy for 16,000 hours.
- The UV lamps may continue to glow well beyond 16,000 hours but will not provide proper intensity and must be replaced to ensure efficacy.
- The UV lamps are housed in a quartz tube. If the quartz tube becomes dirty, its ability to transmit UV rays from the lamp will be diminished.
- The service interval for the quartz tube is dependent on pool water chemistry and some pools may require more frequent cleaning than others.
- Initially, inspect the quartz tube after 750 hours of use and clean as needed. Subsequent cleaning intervals can be increased or decreased based on the condition of the quartz tubes or observed water conditions.

4C-1. UV Lamp Removal

1. Open the enclosure door.
NOTE: The AOP Pro will not operate while the enclosure door is open.
2. After allowing adequate time for the UV lamps to cool, disconnect the UV lamp from the connector on the ballast.
3. Grasp the UV lamp wires and gently pull until the top of the UV lamp has pulled past the lamp retainer tabs.
4. Pull slowly on the white ceramic end of the UV lamp until the bottom has pulled past the lamp retainer tabs. If the UV lamp is difficult to remove, use a slight twisting motion or remove the lamp retainer. **AVOID TOUCHING THE UV LAMP GLASS WITH YOUR BARE HANDS.** Oils on your hands can cause hot spots on the UV lamp and shorten its life. Use a soft clean cotton cloth or clean cotton gloves to handle the UV lamp. Carefully place the UV lamp in a clean, dry, and safe location. Clean the UV lamp if necessary with alcohol and repeat this process for the other UV lamps.

4. MAINTENANCE & SERVICE

4C-2 Quartz Tube Removal and Cleaning

NOTE: For instructions on cleaning without mechanical disassembly, see *Appendix*.

1. If the AOP Pro is mounted below the water level, system isolation valves must all be CLOSED to prevent excess water from draining into the unit.
2. Loosen main inlet and outlet fittings on the AOP Pro, this should allow sufficient water to drain from the AOP Pro.
3. Before continuing, allow adequate time for the UV lamps and quartz tubes to cool.
4. Remove the UV lamps as described in Section 4B-1.
5. Remove the front lamp retainer screws using the hex key included in the parts kit and remove the lamp retainer.
6. Grasp the quartz tube and pull it outward to remove it from the UV reactor.
NOTE: Additional water will drain from the UV reactor when the quartz tube is removed.
7. Remove the sealing O-ring from the quartz tube and set aside.
8. Wipe all residue from the quartz tube. If calcium deposits are encountered, use a mild solution (4:1) of water and muriatic acid (available at pool supply stores), or household calcium/lime remover.

CAUTION Follow the directions for use and handling of muriatic acid on the acid bottle label. Use proper eye and skin protection and avoid breathing acid fumes.

NOTE: DO NOT USE ABRASIVE CLEANERS as they can scratch the high quality quartz glass. After cleaning the quartz tube, wash it off and wipe dry. Inspect the quartz tube for cracks. Replace if cracks are found. Make sure the inside of the quartz tube is dry before replacing the UV lamp(s).

NOTE: DAMAGES CAUSED BY BROKEN QUARTZ TUBES ARE NOT COVERED UNDER THE LIMITED WARRANTY.

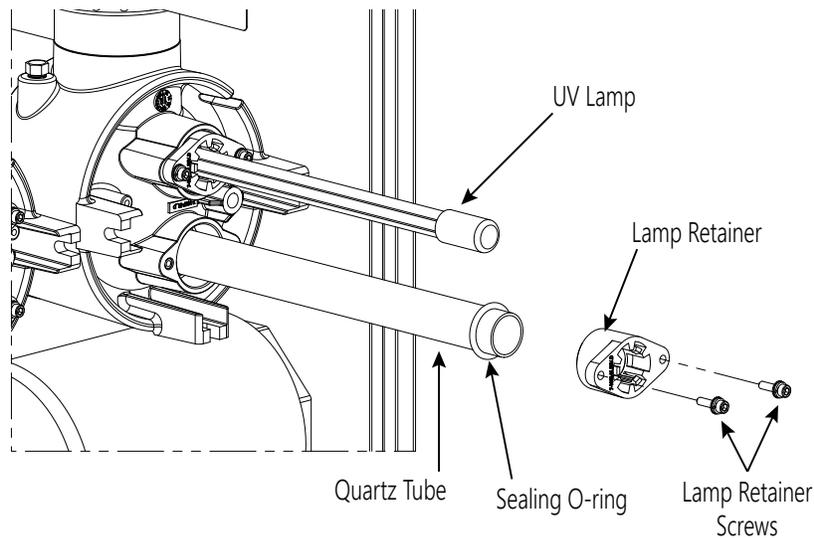


Figure 6: UV Lamp and Quartz Tube Removal

4C-3 Quartz Tube Installation

1. Place a sealing O-ring approximately 1/2in (12.7mm) from the end of the quartz tube. Insert quartz tube into the UV reactor until it is fully seated.

NOTE: If the end of the quartz tube is protruding from the UV reactor, the alignment is off. Remove and re-insert the quartz tube to seat it properly as shown in *Figure 7*.

2. Place the lamp retainer over the quartz tube and attach the lamp retainer using the lamp retainer screws and washers as shown in *Figure 6*. Make sure the lamp retainer flanges are fully seated against the UV reactor.
3. Tighten main inlet and outlet fittings on the AOP Pro.
4. Turn the circulation pump ON and check the quartz tube seals for leaks.
5. Turn the circulation pump OFF once you have confirmed that the quartz tubes are not leaking.

4. MAINTENANCE & SERVICE

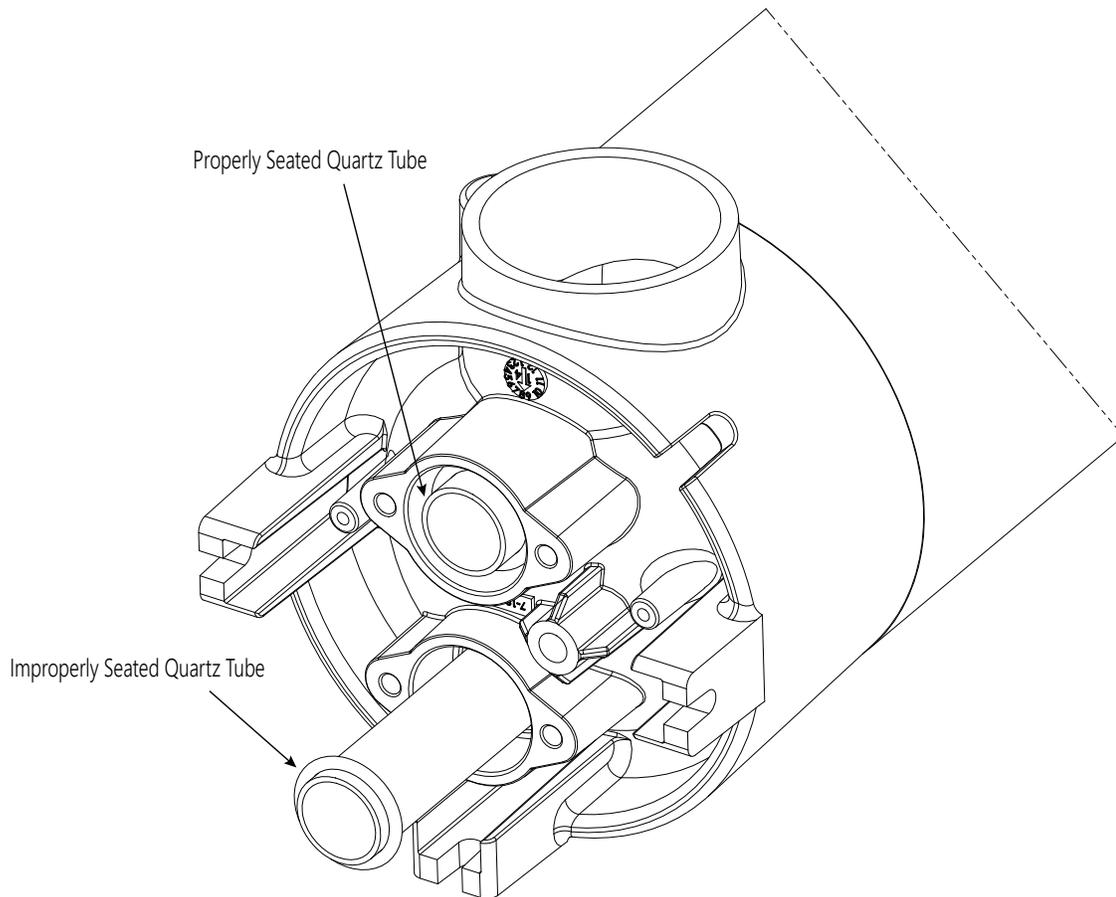


Figure 7: UV Quartz Tube Installation

4C-4 Re-installing the UV Lamp(s)

NOTE: Make sure to handle the UV lamp as described in **SECTION 4B-1**.

1. TURN OFF YOUR PUMP IF YOU HAVE NOT DONE SO.
2. Slowly press the UV lamp fully past the lamp retainer tabs and into the quartz tube until it is seated on the lamp cushion in the bottom of the quartz tube.
3. Connect the UV lamp connector to the connector on the ballast.

ENVIRONMENTAL NOTICE: Hg-Lamp CONTAINS MERCURY. Manage in accordance with disposal laws. See: www.lamprecycle.org

4. MAINTENANCE & SERVICE

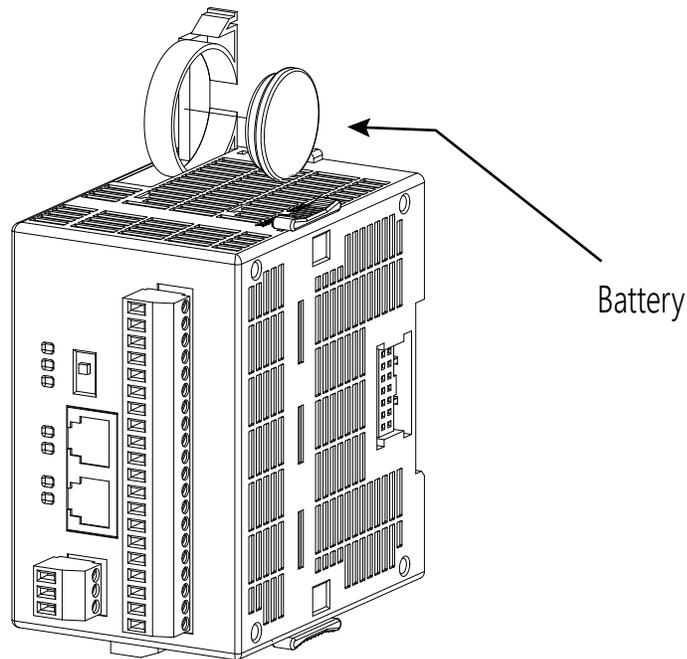


Figure 8: Battery Replacement

4D. PLC Memory Backup Battery Replacement

1. On the top of the PLC, press the retaining clip on the battery door and swing the battery door open.
2. Remove the old battery from right side of the coin-type slot.
3. Install the new battery with the +, or flat, side out.
4. Close the battery door so that it locks securely.
5. Make note of the date the battery was replaced (it must be performed annually).

4E. Winterizing

If the pool will be shutting down for the winter months and the AOP Pro will remain exposed to freezing temperatures, the unit must be drained to prevent freeze damage to the wetted components. To drain the AOP Pro, see the following steps.

1. If the AOP Pro is mounted below the water level, isolation valves must all be CLOSED to prevent excess water from draining into the unit.
2. Loosen main inlet and outlet fittings on the AOP Pro, this should allow most water to drain from the AOP Pro.
3. Open the door and locate the bottom quartz tube in each UV reactor (Refer to *Figure 4*). Remove these quartz tubes to drain the remaining water from the UV reactor(s).

5. TROUBLESHOOTING & RESOURCES

5A. Troubleshooting

Knowledge of electrical applications is required for troubleshooting. Contact a certified electrician if you are unsure of your ability to service the equipment. Improper servicing will void generator warranty. If any condition persists contact CMP Technical Support (see **Section 5B**).

The HMI screen will provide immediate text notification of all system alerts. Other alert messages may occur that are not listed below. The HMI also includes alarm history and fault counters that may be accessed for further help as described above.

Symptom: HMI screen appears unpowered.

1. No power to the AOP Pro:
 - a. Check circuit breaker at the power distribution box.
 - b. Check for loose connections or wiring breaks in the main power wiring leading to the AOP Pro.
 - c. Check internal circuit breaker.

Symptom: "SYSTEM WAITING ON REMOTE START (CONTACTS)" message.

1. Remote start contacts are open. Verify that remote start contacts are wired and operating properly.

Symptom: "WAITING ON SYSTEM FLOW" message.

1. Insufficient flow through AOP Pro.
 - a. Verify that the main system pump is running properly and that filter and skimmers are clean.
 - b. Verify that pool valves have not been adjusted to limit flow below the minimum requirement.
2. Clear any blockages in return line.
3. Verify proper operation of flow switch. Replace as necessary.

Symptom: "OZONE STARTING, CHECKING OXYGEN PRESSURE" message.

1. Oxygen pressure is below pressure switch setpoint (1.5psi)
 - a. Clean or replace air filter.
 - b. Verify all gas lines are secure and free of kinks, damage or leaks.
 - c. Check compressor operation. Rebuild or replace as necessary.
 - d. Check pressure switch. Replace as necessary.
 - e. Check oxygen concentrator. Replace as necessary.

Symptom: "OZONE STARTING, CHECKING VACUUM" message.

1. System vacuum is below vacuum switch setpoint (-1.5inHg)
 - a. Increase vacuum by closing injection adjustment valve (this increases injector inlet pressure and decreases back-pressure resulting in more suction).
 - b. Verify that pool valves have not been closed or adjusted to reduce injector inlet pressure or increase back-pressure.
 - c. Verify all gas lines are secure and free of kinks, damage, or leaks.
 - d. Check vacuum switch. Replace as necessary.

Symptom: "HIGH OZONE CELL TEMPERATURE" message.

1. Thermal protection of ozone cells is active (>150°F)
 - a. Check ozone cell cooling water flow.
 - b. Verify water cooling lines are secure and free of kinks, damage, or leaks.

Symptom: "LOW UV PRODUCTION, CHECK SYSTEM" message.

1. Check lamp connector plugs for complete connection.
2. Check UV lamps. Replace as necessary.
3. Check ballasts. Replace as necessary.

Symptom: "LOW OZONE PRODUCTION, CHECK SYSTEM" message.

1. Check ozone system fuse. Replace as necessary.
2. Replace ozone cell.
3. Replace ozone power supply.

Symptom: "LOW SYSTEM PRODUCTION, CHECK SYSTEM" message.

1. Both UV and ozone system productions are low at the same time, see previous troubleshooting steps to correct each.

5. TROUBLESHOOTING & RESOURCES

5B. Contact Information:

For technical assistance:

- Call: 1-800-733-9060
- Email: support@c-m-p.com
- Visit: www.cmpcommercial.com

Be prepared with the following information:

- Name
- Address
- Model #
- Date Purchased

5C. Ordering Information:

To locate a dealer nearest you call 1-800-733-9060 or visit www.cmpcommercial.com.


5D. Standard Replacement Parts List

DESCRIPTION	PART NUMBER	REPLACEMENT INTERVAL
PLC MEMORY BACKUP BATTERY	5-1402	Annually
AIR FILTER ELEMENT	7-1120	2250 Hours
OXYGEN CHECK VALVE	7-1140-01	8750 Hours
OZONE CHECK VALVE	8-0330	8750 Hours
OZONE CELL O-RING	7-0461 (EA)	8750 Hours
COMPRESSOR REBUILD KIT	2-1299-01	8750 Hours
UV LAMP REPLACEMENT KIT	9-1226-01 (EA)	16,000 Hours
OZONE CELL	9-0927 (EA)	As Needed
QUARTZ TUBE REPLACEMENT KIT	9-1701-01 (EA)	As Needed

Table 2: Replacement Parts

NOTE: The warranty is void if the parts listed above are not replaced at recommended intervals.

APPENDIX A

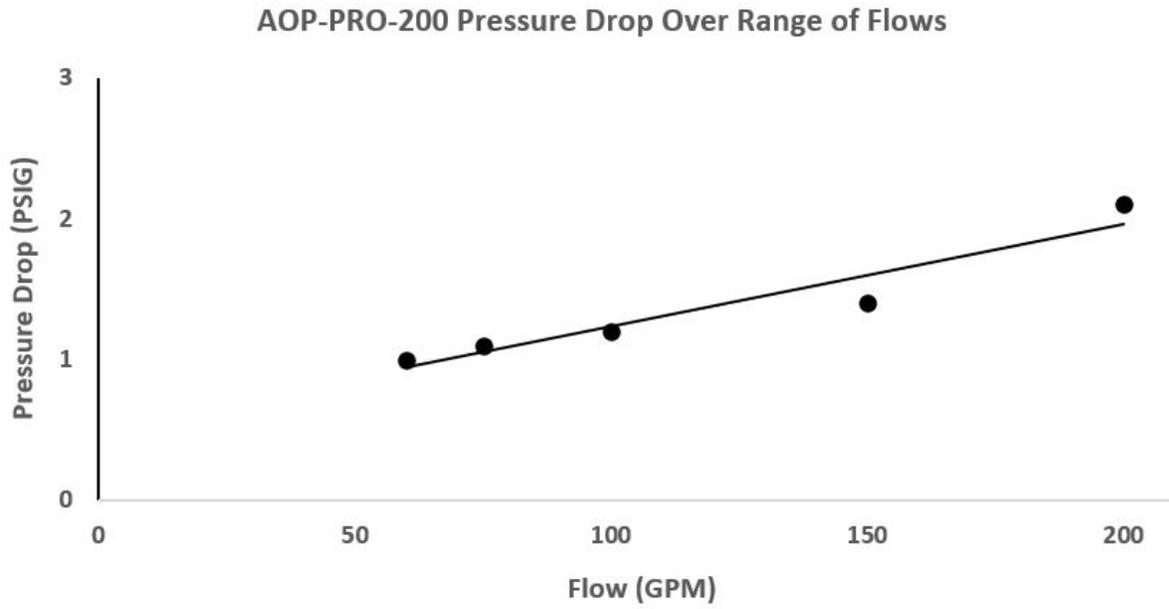


AOP Pro Pressure Drop Characterization

NOTE: Tested on simulated recirculation system using a variable speed pump. No back pressure added. Actual results will vary depending on pump and plumbing variables.

APPENDIX B

In-Place Quartz Tube Cleaning

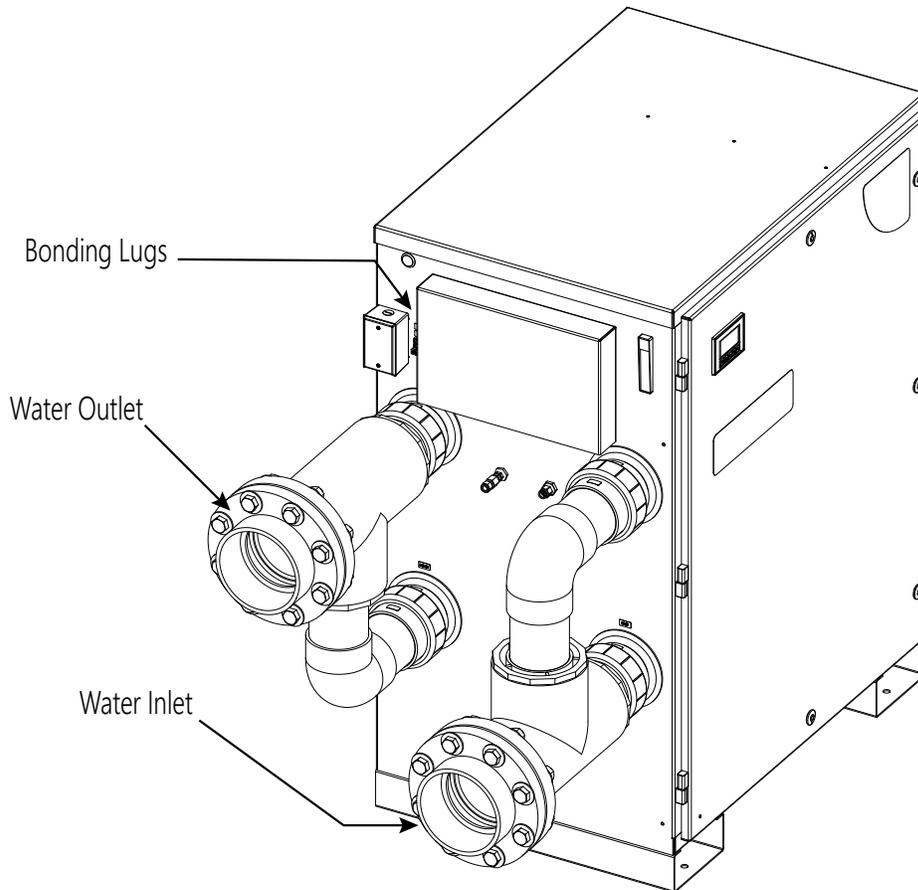

The AOP Pro quartz tubes may be cleaned without removing them from the vessel.

1. Ensure that the AOP Pro is isolated from the rest of the pool system with valves at the inlet and outlet.
 - a. Connect to the inlet/outlet unions or flanges.
 - b. Flow the cleaning solution from bottom to top.
2. When cleaning is complete, drain the AOP Pro completely from the inlet union or flange and run the pool system immediately for an extended period to fully rinse the internal components.
 - a. Special considerations may apply depending on the cleaning system.
 - b. Contact Customer Service if there is any question about compatibility with the AOP Pro components.

SAVE THESE INSTRUCTIONS

Record Information on this System Below & Keep for Your Records

Installer _____

System Purchased From _____

Installation Date _____

Serial Number _____

CMP, LLC
36 HERRING ROAD, NEWNAN, GA 30265
WWW.CMPCOMMERCIAL.COM

0921ab